KitchenAid® VENTILATION PARTS

For Models: KIRD801HSS1, KIRD861HSS1
(Stainless) (Stainless)

30" AND 36"
RETRACTABLE DOWN DRAFT
VENT SYSTEM

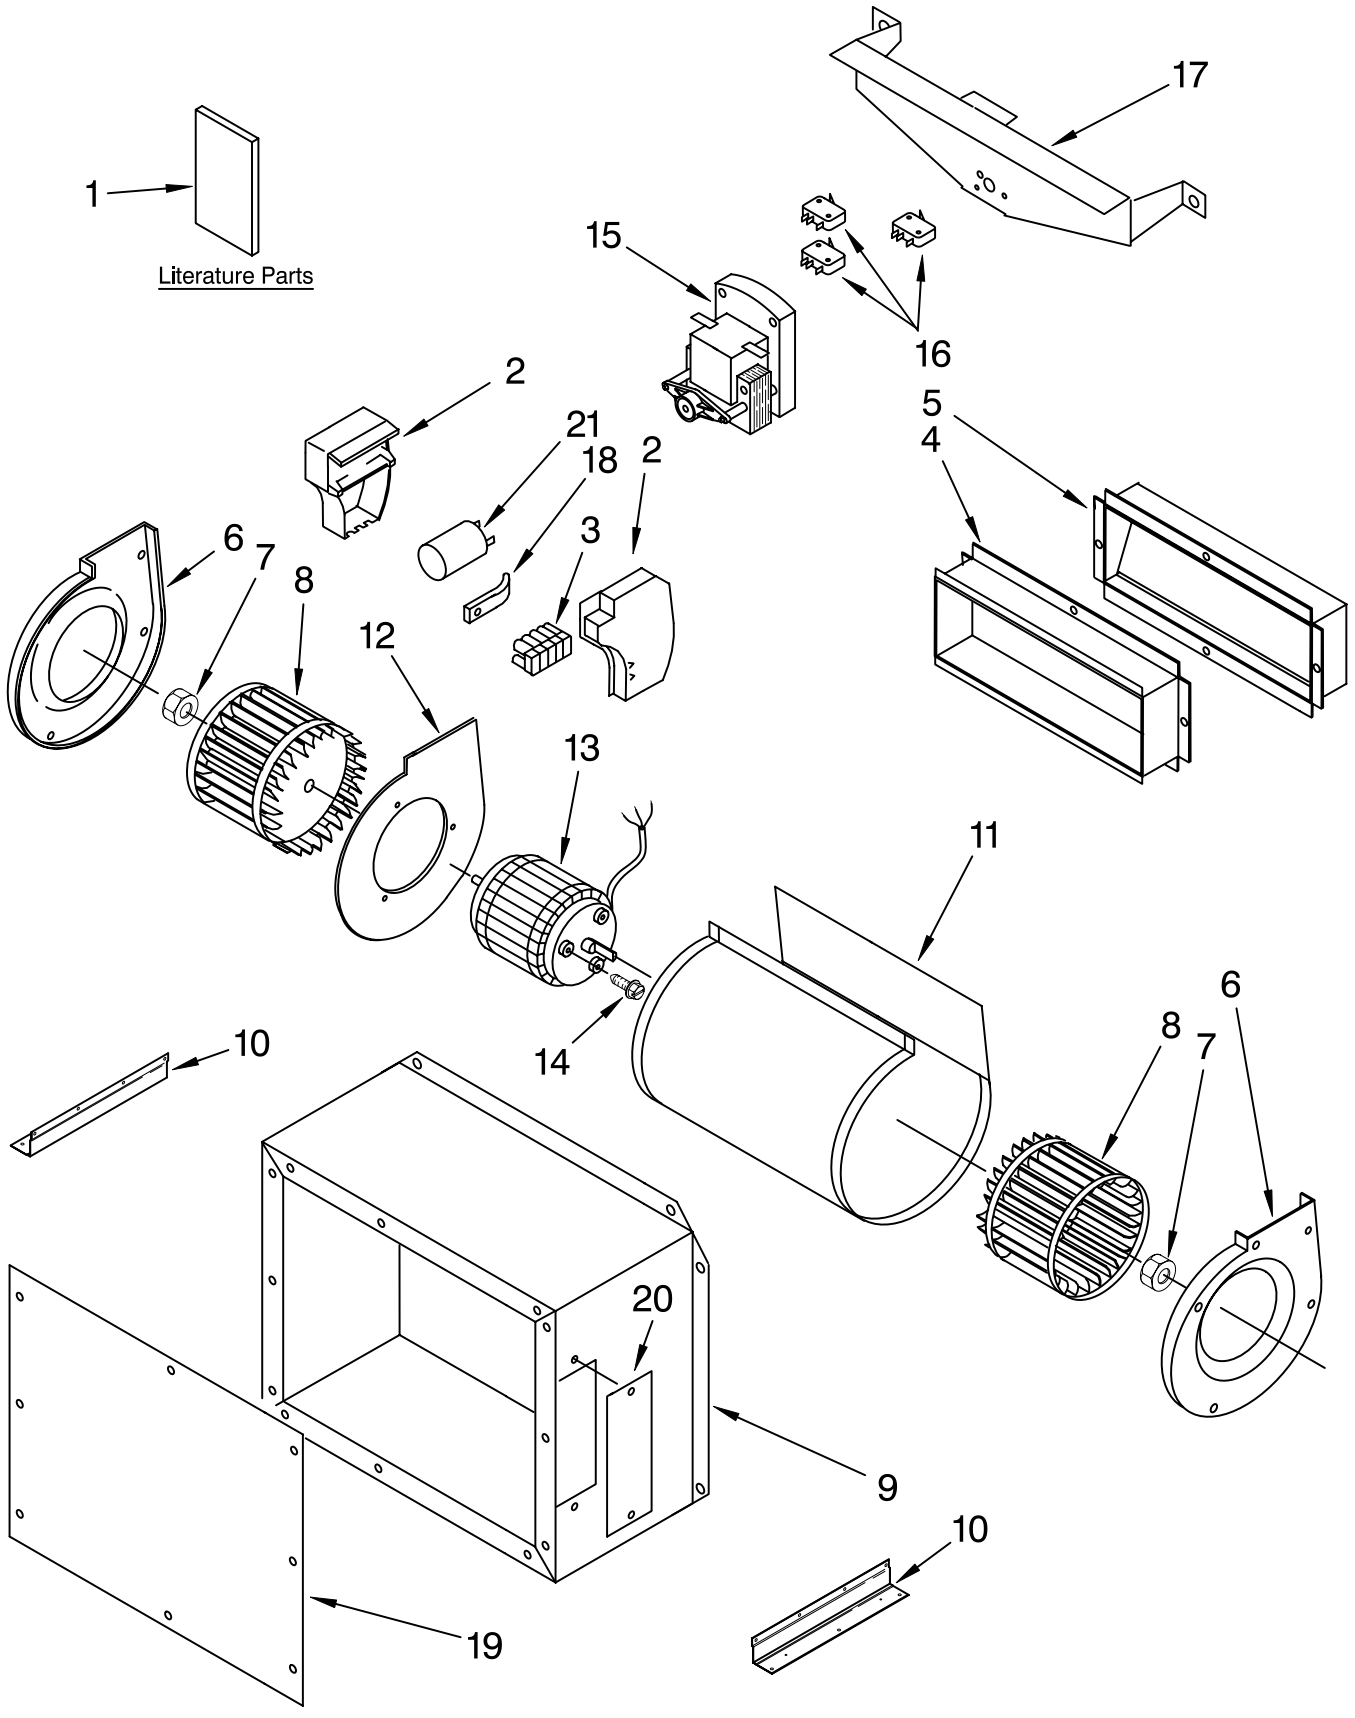

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

VENTILATION PARTS

For Models: KIRD801HSS1, KIRD861HSS1
(Stainless) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	9763381	Use & Care Guide/ Install Instructs
2		Cover, Capacitor
	4360060	L.H.
	4360056	R.H.
3	4360176	Terminal
4	4360177	Guide, Exhaust
5	4360178	Damper
6		Cover, Blower
	4360179	R.H.
	4360188	L.H.
7	4360180	Nut
8		Blower Wheel
	4360181	R.H.
	4360187	L.H.
9	4360182	Box, Blower
10	4360183	Support, Blower
11	4360184	Housing, Blower
12	4360185	Plate, Motor
13	4360212	Motor
14	4360114	Screw
15	4360154	Motor, Gear
16	4360362	Micro Switch (3)
17	4360155	Bracket, Motor Gear
18	4360059	Bracket, Capacitor
19	4360189	Cover, Blower Box
20	4360190	Cover, Exhaust Outlet
21	4360175	Capacitor

HOUSING AND CONTROL PARTS

For Models: KIRD801HSS1, KIRD861HSS1
(Stainless) (Stainless)

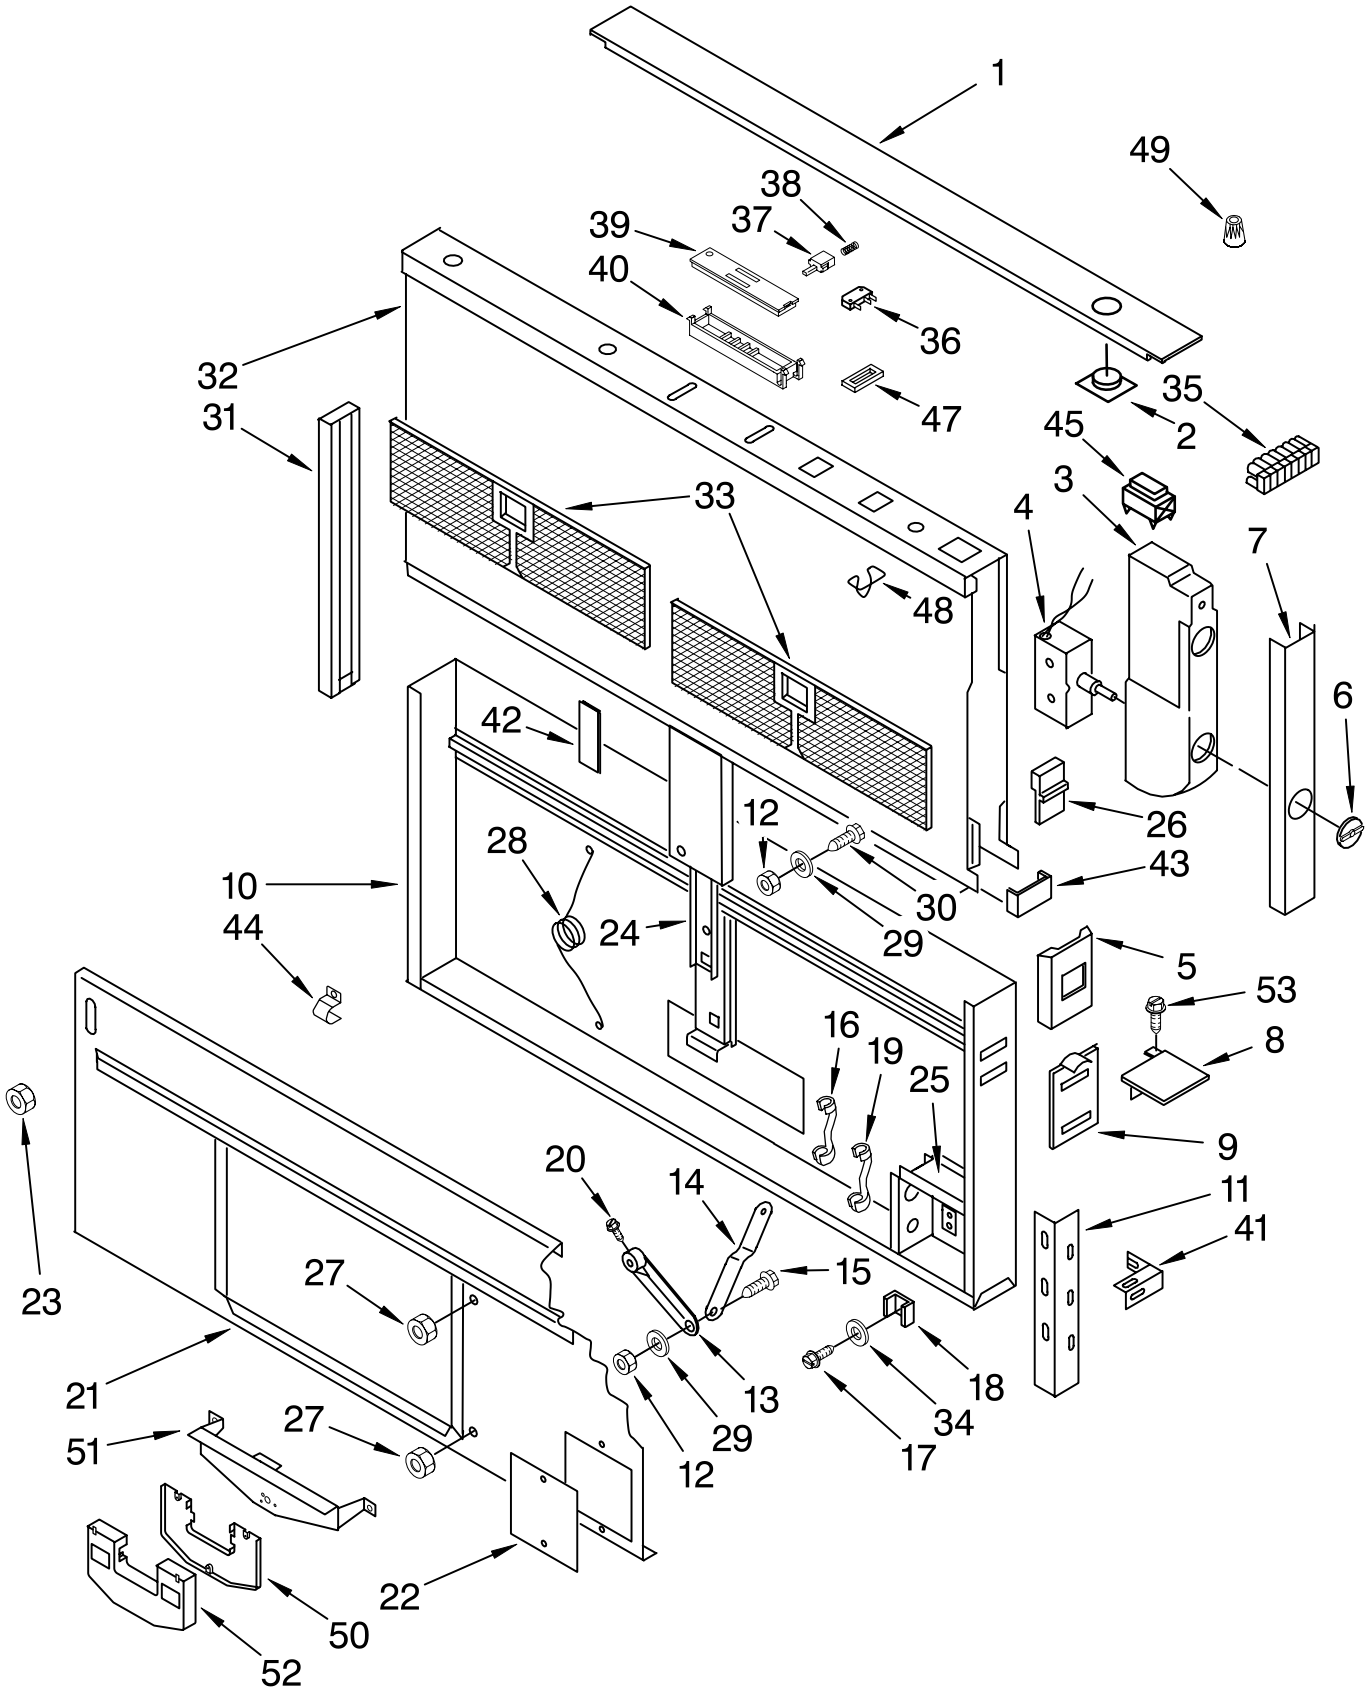

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

HOUSING AND CONTROL PARTS

For Models: KIRD801HSS1, KIRD861HSS1
(Stainless) (Stainless)

Illus. No.	Part No.	DESCRIPTION
1		Cover, Controls (Top)
	4360374	30"
	4360375	36"
2	4360216	Button, Push
3	4360134	Housing, Switch
4	4360135	Switch, Fan
5		Bracket, Shield
	4360136	Left Hand
	4360387	Right Hand
6	4360137	Knob
7	4360138	Panel, Control
8		End Cap
	4360381	Left Hand
	4360382	Right Hand
9	4360140	Plate, Support (Upper) (2)
10		Housing, Non−Serviceable
11		Bracket, Support
	4360141	Lower R.H.
	4360170	Lower L.H.
12	4360142	Nut
13	4360143	Arm, Gear Motor
14	4360144	Arm, Cavity
15	4360145	Bolt
16	4360062	Strain Relief
17	4360006	Screw
18	4360146	Nut
19	4360147	Strain Relief
20	4360148	Screw
21		Cover, Housing Non−Serviceable
22	4360149	Cover, Wiring Box
23	4360150	Nut
24		Guide, Housing Non−Serviceable
25	4360152	Box, Wiring
26	4360153	Clamp
27	4360156	Nut
28	4360157	Spring
29	4360158	Washer
30	4360159	Bolt
31	4360160	Trim, R.H.
32		Cavity Non−Serviceable
33		Filter, Grease
	4360193	KIRD801−30" Model
	4360194	KIRD861−36" Model
34	4360005	Washer
35	4360165	Terminal
36	4360361	Micro Switch (2)
37	4360166	Actuator, Micro Switch (2)
38	4360167	Spring (2)
39	4360168	Cover, Switch (2)
40	4360169	Housing, Switch (2)
41		Support
	4360171	L.H.
	4360172	R.H.
42	4360173	Guide, Housing (Back)
43	4360174	Spacer, Cavity (2)
44	4360044	Clamp, Cable
45	4360210	Switch
47	4360385	Connector (3)
48	4360272	Spring (3)
49	4360211	Nut, Wire
50	4360230	Cover, Box
51	4360155	Bracket, Motor
52	4360229	Box, Microswitch
53	4360386	Screw

Illus. No.	Part No.	DESCRIPTION

Following Parts Not Illustrated

4360198	Installation Kit
814380	Kit , Motor Mount

OPTIONAL PARTS NOT INCLUDED

8171304	Trim Kit−White (KIRD801)
8171305	Trim Kit−Black (KIRD801)
8171306	Trim Kit−Biscuit (KIRD801)
8171310	Trim Kit−White (KIRD861)
8171311	Trim Kit−Black (KIRD861)
8171312	Trim Kit−Biscuit (KIRD861)

FOLLOWING PARTS NOT ILLUSTRATED

4360227	Cooktop Strip